# REMOTE CONTROL RGBW 2.4GHZ 4-GROUPS RT7



# **Feature**


- Using 2.4G RF remote control, Long distance transmission.
- Available to dimming the lights full-color and brightness.
- Can control a plurality of controllers, and can freely code and clear codes.
- Remote control is stylish and convinient to use.



# **Technical Parameter**

Power	3VDC(AAA*2pcs)
Remote Distance	30 m
Wireless Frequency	2.4Ghz ISM
Working Current	< 20mA
Standby Curent	< 10uA
Standby Time	6 months
Pack Size	139(L)×50(W)×19(H) mm
N.G.	55 g
Working Temp.	-20 ~ 50 ℃

# **Product Size**

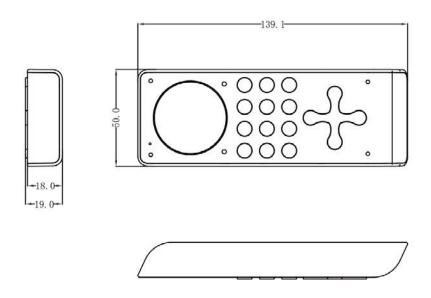

# REMOTE CONTROL RGBW 2.4GHZ 4-GROUPS RT7



#### Interface Instruction



1 2 3 4 : Short press select and turn on zone light Long press 2s turn off zone light

R G B: Adjust R/G/B brightness, short press turn on/off

W: For RGB light, short press turn on/off white (RGB mix) For RGBW light, short press turn on/off W channel

Adjust mode for current selected zone

Short press run the scene, long press 2s save

\* Brightness + / Brightness -

S- S+: Speed + / Speed -

(1): Short press turn on/off all zone light

### **Match Guide**

Remote match with 2.4G RF controller, dimming driver

#### Match with controller (with match key)

- 1. code matching: press the code matching key for a short time, press the "group on" key of the remote controller for 3 times within 5 seconds when the indicator light blinks, and the connected lamps "flash three times slowly", and the code matching is successful.
- 2. code clearing: press the code matching key for a short time, press the "group on" key of the remote controller for 6 times within 5S when the indicator light flashes, and the connected lamps "flash six times slowly", and the code clearing is successful
- 3. The remote controller with multiple groups can only use its group on key for code matching and code clearing.

#### Match with controller (without match key), dimming driver

- 1. code matching: press the code matching key for a short time, press the "group on" key of the remote controller for 3 times within 5 seconds when the indicator light blinks, and the connected lamps "flash three times slowly", and the code matching is successful
- 2. code clearing: press the code matching key for a short time, press the "group on" key of the remote controller for 6 times within 5S when the indicator light flashes, and the connected lamps "flash six times slowly", and the code clearing is successful
- 3. The remote controller with multiple groups can only use its group on key for code matching and code clearing.

#### Attention

When install the batteries, please don't touch the color ring or any key and use the remote 5 seconds later after batteries installed. If the touch key or ring is low-sensitive, please reinstall the batteries in the right way.